



Operating Instructions – Dishwasher Hotpoint LST216

Overview

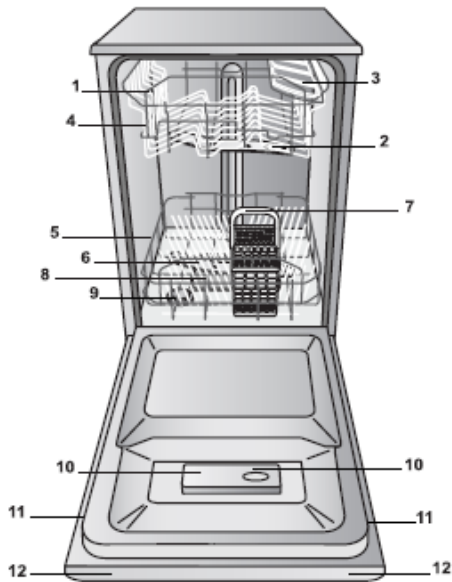


1. Upper rack
2. Upper sprayer arm
3. Tip-up compartments
4. Rack height adjuster
5. Lower rack
6. Lower sprayer arm
7. Cutlery basket
8. Washing filter
9. Salt dispenser
10. Detergent and rinse aid dispensers
11. Data plate
12. Control panel***

Control Panel

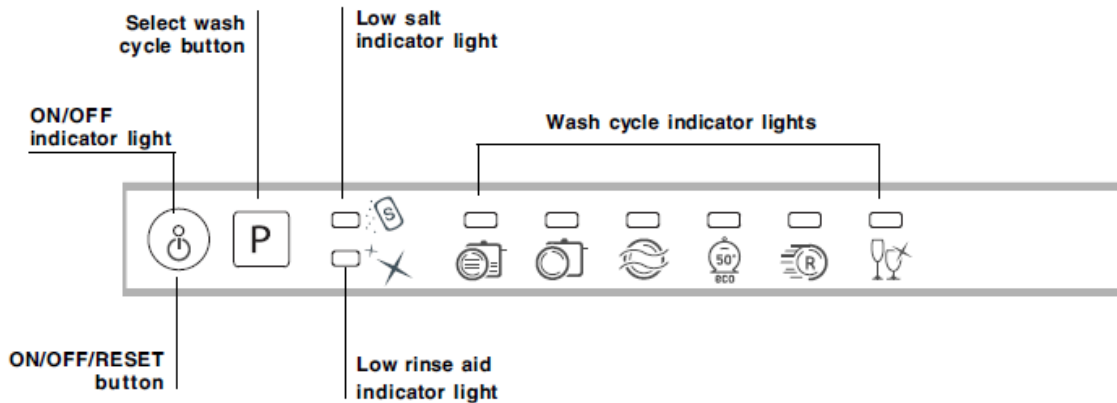

Detergent dispenser

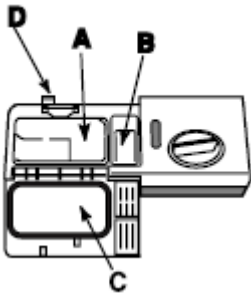

A: Washing detergent compartment

B: Pre-wash detergent compartment

Open cover C by pressing button D. Pour in the detergent, for powder detergent use compartments A and B. For detergent in tablet form place it in compartment A and close the cover.





 

Starting the dishwasher

1. Open the door and press the On/Off button, you will hear a short beep and the On/Off and wash cycle indicator lights switch on for a few seconds.
2. Measure out the detergent
3. Load the dishwasher
4. Select the wash cycle in accordance with the type of crockery and its soil level by pressing the P button; the indicator light corresponding to the selected wash cycle will switch on.
5. Start the wash cycle by shutting the door; after a few seconds have passed, a long beep signals the start of the wash cycle.
6. Two short beeps and one long one indicate the end of the wash cycle and the indicator light corresponding to the wash cycle flashes slowly. Open the door, switch off the appliance by pressing the On/Off button.
7. Wait a few minutes before removing the crockery in order to avoid burns.

Changing a wash cycle in progress

If a mistake was made in the wash cycle selection process it is possible to change the cycle provided that it has only just begun: open the door, taking care to avoid the escaping steam, press and hold the On/Off button; the machine will switch off with a long beep. Switch the machine back on using the On/Off button and select the new wash cycle using the P button; start the cycle by closing the door.

Wash cycles

Wash cycle selection instructions	Wash cycle	Detergent (A) = compartment A (B) = compartment B			Drying	Wash cycle duration (tolerance ±10%) Hrs. Min.
		Powder	Liquid	Tablets		
Extremely soiled dishes and pans (not to be used for delicate items).	 Intensive	25 g (A)	25 ml (A)	1 (A)	Yes	2:25'
Normally soiled pans and dishes. Standard daily wash cycle.	 Normal	21 g (A) 4 g (B)	21 ml (A) 4 ml (B)	1 (A)	Yes	1:50'
Preliminary wash cycle for dishes while the load is awaiting completion with the dishes from the next meal.	 Soak	No	No	No	No	0:08'
Environmentally-friendly wash cycle with low energy consumption levels, suitable for pans and dishes.	 Eco*	21 g (A) 4 g (B)	21 ml (A) 4 ml (B)	1 (A)	Yes	2:35'
Economic and fast wash to be used for lightly soiled dishes. (Run cycle immediately after use) (2 plates + 2 glasses + 4 pieces of cutlery + 1 saucepan + 1 small frying pan).	 Rapide	21 g (A)	21 ml (A)	1 (A)	No	0:35'
Economic and fast wash for delicate items which are sensitive to high temperatures. (Run cycle immediately after use) (glasses upper rack + delicate plates, lower rack).	 Delicate	25 g (A)	25 g (A)	1 (A)	Yes	1:35'